



# MH Type Wiring Guide

Standard heater sets may come with different terminal sets depending on the customers' requirement. Refer to the examples below for wiring guideline of MH type Fin PTC Air Heaters with Type 4 accessories (PPS frame + terminal wire sets, fuse and thermostat).


## STANDARD WIRING 1 (Single Insulation)

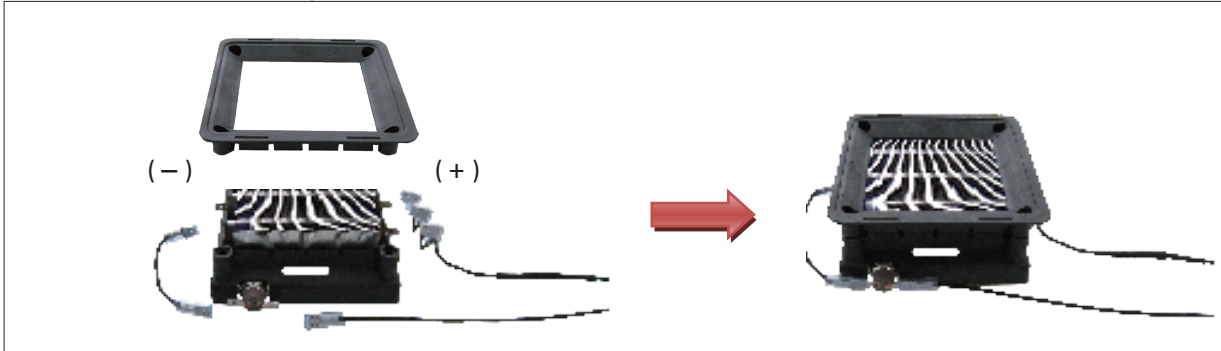


## STANDARD WIRING 2 (Double Insulation)

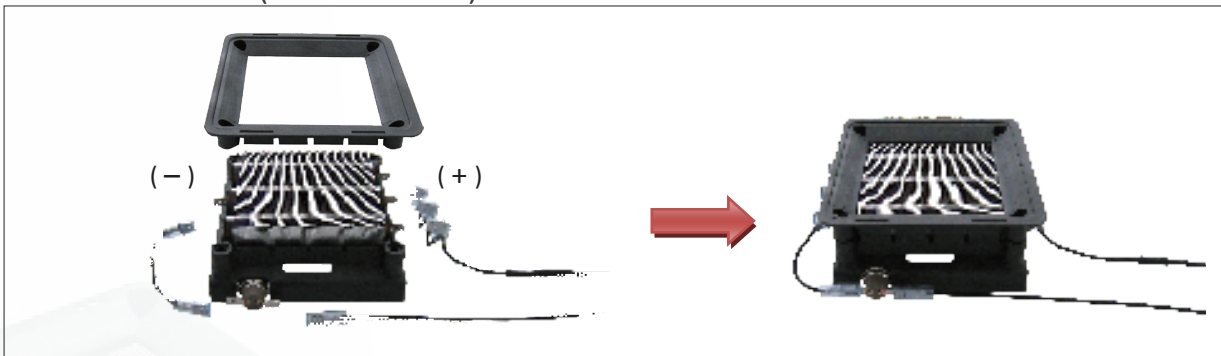

## STANDARD HIGH AMPERE WIRING (Does not include thermostat)

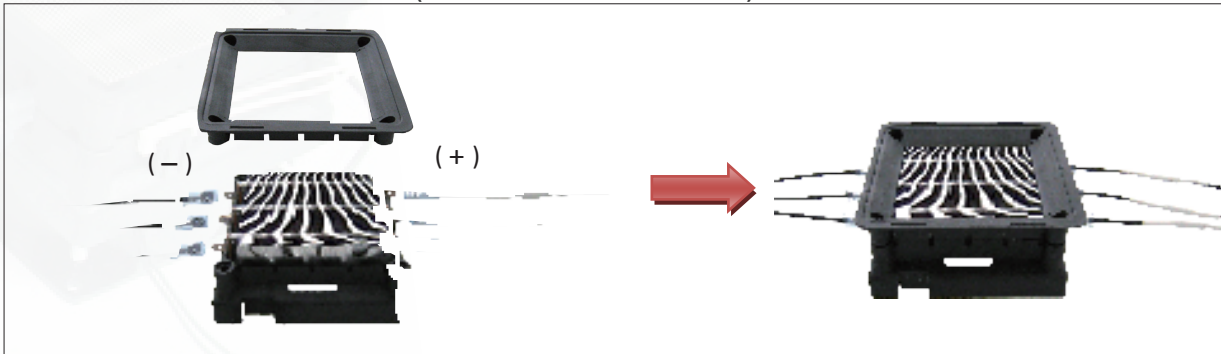

## THREE STAGE POWER SETTINGS (Requires special order)

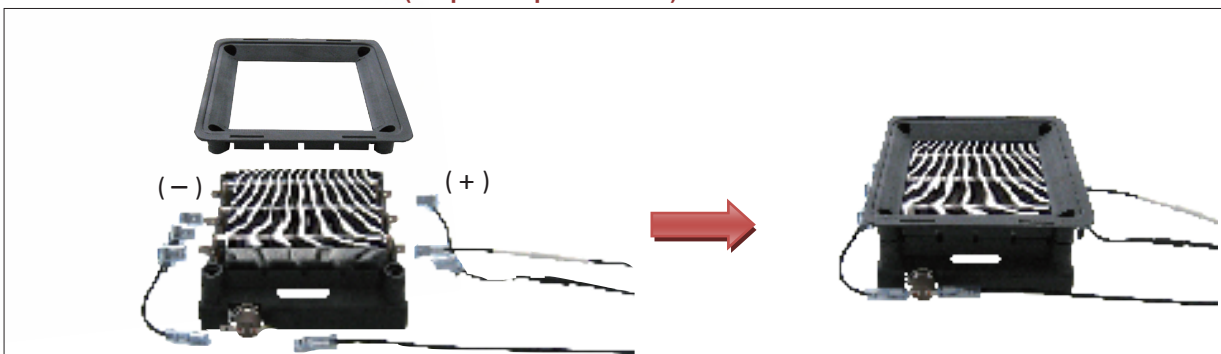

(+) side : refer to illustration above & connect each wire to separate switches.  
 (-) side : same as standard wiring (refer to Standard Wiring 1 for single insulation; 2 for double insulation; 3 for high ampere).